

Setting up a 1000-R and a 4000-R TV Lift

*** After every successful setting you will hear 2 quick beeps ***

1. Perform a master reset. You will hear error beeps after – **F, Set, F, Esc.**
2. Make sure lift is centered. To do this make sure it is safe
To rotate. Rotate in one direction for a couple seconds
And then back the other direction until the lift stops and
Beeps. Once lift is stopped proceed to next step.
3. Move lift to the desired Home position.
Make sure post is not maxed down.
Wait for pause in error beeps. Once there – **F, Set, Home, Set.**
4. Move lift up to the TV viewing height.
Make sure post is not maxed up. Once there – **F, Set, Up Arrow, Set.**
5. Bring lift down to the out of cabinet position.
This position is where the bottom of the TV is
At least .5” above the cabinet and cannot be
The same as the up arrow setting. Once there – **F, Set, Down Arrow, Set**
6. Hold up arrow and the lift will stop where you
Set the Up arrow setting. Now set your #1 Preset – **F, Set, 1, Set**
7. You can also set up your other up and rotated positions
now by moving lift to desired location. Once there – **F, Set, (preset2-4), Set**
8. To test your settings press **F, Home** and the lift will go automatically down.
Press **F, (preset1-4)** and the lift will go automatically to that preset.